

- 1 Release handle
- 2 Arm
- 3 Handle

4. Jacking down

- (1) Place the garage jack in the specified position, and raise the vehicle, paying attention to the direction it is facing.
- (2) Remove the rigid rack.
- (3) Loosen the release handle slowly, and lower the arm gently.
- (4) Once the tires have reached the ground completely, apply wheel stoppers.

NOTICE:

- It is usual to jack a vehicle down from the front end. However, the order can change depending on the model.

CAUTION:

- Perform safety checks before raising or lowering a vehicle, and indicate to other people that the operation is about to happen. Check that nothing is below the vehicle before lowering it.
- Loosen the release handle slowly, and lower the arm gently.
- When the garage jack is not being used, lower the arm and stand the handle up.


(5/5)

Preview from Notesale.co.uk
 Page 11 of 13


Question-4

Match the tools shown below with the corresponding names in the word group.


(1) () wrench

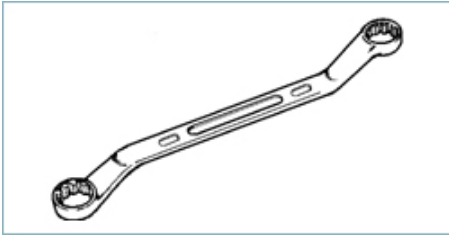


(2) () wrench

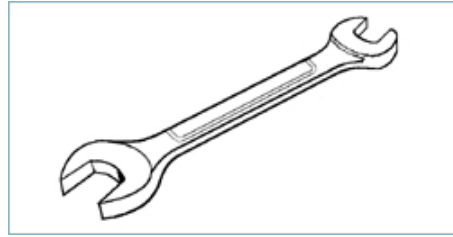

(3) () wrench

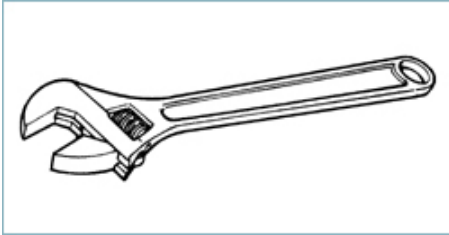

(4) () wrench

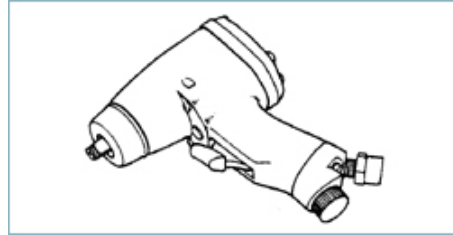

- a) Openend b) Adjustable c) Air impact d) Air ratchet e) Torque f) Spark plug g) Socket
h) Boxend

Preview from Notesale.co.uk
Page 13 of 13